


# Relay makes HORN LOUDER (more power).

Attach to negative side of battery post ONLY not to frame.

## Compressor



## Relay

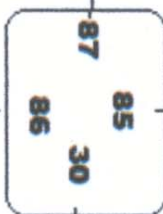

Attach to Positive Battery Post

Attach negative side battery post ONLY, not to frame!

Connect with 12 or 14 gauge wire from relay to the Positive horn wire from existing horn.

Relay must be installed by certified motorcycle technician.

Disconnect battery before installing relay.

Use 12 or 14 gauge wire ONLY!

## HINTS:

Make sure battery is NOT over ONE YEAR OLD.

On bikes with over 10,000 miles, to make horn louder, cut off female plug connector from positive side of original wiring. Keep stripping back insulation until all strands of wire are copper (over time wire may turn green or aluminum in color) this affects speed of compressor, the faster the compressor spins the LOUDER the horn. Attach new female connector.

AGAIN, DO NOT use stock horn ground wire (tape over the old one). Run a 12 or 14 gauge wire from the negative side of our compressor to the negative post on your battery, not to motorcycle frame.

Please refer to PICTURE # 4

on installation instructions to see relay mounted under seat.

PICTURE #5 ON ULTRA INSTRUCTIONS!